



**Environmental
Microbiology
Laboratory, Inc.**

Report for:

Mr. Kirit Kumar
Approved Allergy Fighters SDN BHD
6-2 JLN 15/48A
Kuala Lumpur, WP, 51000 MY

Regarding: Sample Lab Report
EML ID: 202674

Date of Analysis: 02-17-2006 to 02-17-2006

Approved by:

Dr. Harriet Burge
Director of Aerobiology

Dr. David A. Bell
Laboratory President

Project SOPs: Direct microscopic examination (100036), Spore trap analysis (100005)

This coversheet is included with your report in order to comply with AIHA and ISO accreditation requirements.

For clarity, we report the number of significant digits as calculated; but, due to the nature of this type of biological data, the number of significant digits that is used for interpretation should generally be one or two. All samples were received in acceptable condition unless noted in the Report Comments portion in the body of the report. Due to the nature of the analyses performed, field blank corrections of results is not a standard practice. The results relate only to the items tested.

Environmental Microbiology Laboratory, Inc. ("the Company") shall have no liability to the client or the client's customer with respect to decisions or recommendations made, actions taken or courses of conduct implemented by either the client or the client's customer as a result of or based upon the Test Results. In no event shall the Company be liable to the client with respect to the Test Results except for the Company's own willful misconduct or gross negligence nor shall the Company be liable for incidental or consequential damages or lost profits or revenues to the fullest extent such liability may be disclaimed by law, even if the Company has been advised of the possibility of such damages, lost profits or lost revenues. In no event shall the Company's liability with respect to the Test Results exceed the amount paid to the Company by the client therefor.

Document Number: 200091 - Revision Number: 4

Client: Approved Allergy Fighters SDN BHD
 C/O: Mr. Kirit Kumar
 Re: Sample Lab Report

Date of Receipt: 02-15-2006
 Date of Report: 02-17-2006

DIRECT MICROSCOPIC EXAMINATION REPORT

Location:	B1: Mohd Ali bin Kadir	B2: Ashmah bt Awang
Sample type:	Bulk sample	Bulk sample
Lab ID-Version‡:	882162-1	882163-1
MOLD/FUNGAL GROWTH* : Molds seen growing with underlying mycelial and/or sporulating structures		
Acremonium		
Alternaria		
Aureobasidium		
Basidiospores		
Chaetomium		
Cladosporium		
Colorless spores typical of Penicillium / Aspergillus	1+	2+
Fusarium		
Other colorless, ID unknown		
Stachybotrys		
Torula		
Ulocladium		
Miscellaneous spores**	Few	Few
Other comments†	Many insect parts detected.	None
Background debris or Description††	Miscellaneous debris	Insulation material
General impression	Mold growth	Mold growth

* See Mold/Fungal Growth Details table on the last page.

** See Miscellaneous Spores table on the last page.

† Some comments may refer to the following: Most surfaces collect a mix of spores which are normally present in the outdoor environment. At times it is possible to note a skewing of the distribution of spore types, and also to note "marker" genera which may indicate indoor mold growth. Marker genera are those spore types which are present normally in very small numbers, but which multiply indoors when conditions are favorable for growth.

†† Background debris is an indication of the amounts of non biological particulate matter present. This background amorphous material is graded and described as scant, light, moderate, heavy, or very heavy. (Very heavy background debris may obscure visibility.)

Interpretation is left to the company and/or persons who conducted the field work.

‡ A "Version" greater than 1 indicates amended data.

Client: Approved Allergy Fighters SDN BHD
 C/O: Mr. Kirit Kumar
 Re: Sample Lab Report

Date of Receipt: 02-15-2006
 Date of Report: 02-17-2006

Mold/Fungal Growth Rating Details

Growth Rating	Quantities of molds indicating growth are listed in the in the MOLD/FUNGAL GROWTH section. Judgement is used in determining the amount of growth present in the sample. For example, if only one portion of the sample has evidence of heavy growth, then it will receive a rating of heavy growth even though, strictly speaking, on a percentage basis of the entire sample, the amount of growth is low.	
	Swab/Tape/Dust/Wipe sample	Bulk Sample
< 1+ (Very Light Growth)	Evidence of very light growth observed on the sample as indicated by spores of one type seen with underlying mycelial and/or with their sporulating structures found in less than 10% of the microscopic fields examined.	Areas of very light growth detected by the presence of spores of one type seen with underlying mycelial and/or with their sporulating structures in the bulk sample.
1+ (Light Growth)	Evidence of light growth observed on the sample as indicated by spores of one type seen with underlying mycelial and/or with their sporulating structures found in 10 to 25% of the microscopic fields examined.	Areas of light growth detected by the presence of spores of one type seen with underlying mycelial and/or with their sporulating structures in the bulk sample.
2+ (Moderate Growth)	Evidence of moderate growth observed on the sample as indicated by spores of one type seen with underlying mycelial and/or with their sporulating structures found in 26 to 50% of the microscopic fields examined.	Areas of moderate growth detected by the presence of spores of one type seen with underlying mycelial and/or with their sporulating structures in the bulk sample.
3+ (Heavy Growth)	Evidence of heavy growth observed on the sample as indicated by spores of one type seen with underlying mycelial and/or with their sporulating structures found in 51 to 75% of the microscopic fields examined.	Areas of heavy growth detected by the presence of spores of one type seen with underlying mycelial and/or with their sporulating structures in the bulk sample.
4+ (Very Heavy Growth)	Evidence of very heavy growth observed on the sample as indicated by spores of one type seen with underlying mycelial and/or with their sporulating structures found to be nearly confluent in the majority of the microscopic fields examined.	Areas of very heavy growth detected by the presence of spores of one type seen with underlying mycelial and/or with their sporulating structures in the bulk sample.

Miscellaneous Spores

Slides/specimens are examined for the presence of mold spores and pollen, noting the quantities and distribution of spore types found. A designation of 'normal trapping' is made when a mix of spore types is present with the same general distribution as is usually found outdoors. In other words, the biological component of the sample surface is like that found everywhere. Types of spores present would include basidiospores (mushroom spores), myxomycetes (slime molds), plant pathogens such as ascospores, rusts and smuts, and a mix of saprophytic genera with no particular spore type predominating. Many of these spore types would not be found growing indoors on building materials since many plant pathogens require living plants for growth, and mushrooms require compost, leaf duff of various types, or associations with roots of certain trees, etc. Due to these factors, when a mix of spores seen include these types as well as pollen, the rational source is the outside air, rather than indoor mold growth. The numbers of miscellaneous spores seen are graded and described as shown below as none, very few, few, variety, and wide variety.

None	Very Few	Few	Variety	Wide Variety
No spores detected	Very few spores detected	A few spores detected	Many spores containing a variety of different genera detected	Many spores containing a wide variety of different genera detected

Client: Approved Allergy Fighters SDN BHD
 C/O: Mr. Kirit Kumar
 Re: Sample Lab Report

Date of Receipt: 02-15-2006
 Date of Report: 02-17-2006

DIRECT MICROSCOPIC EXAMINATION REPORT
 (Wet Mount)

Background Debris and/or Description	Miscellaneous Spores Present*	MOLD GROWTH: Molds seen with underlying mycelial and/or sporulating structures†	Other Comments††	General Impression
Lab ID-Version‡: 882162-1: Bulk sample B1: Mohd Uzaid b Khalid				
Miscellaneous debris	Few	1+ colorless spores typical of <i>Penicillium / Aspergillus</i>	Many insect parts detected.	Mold growth
Lab ID-Version: 882163-1: Bulk sample B2: Azimah bt Awang				
Insulation material	Few	2+ colorless spores typical of <i>Penicillium / Aspergillus</i>	None	Mold growth

* Indicative of normal conditions, i.e. seen on surfaces everywhere. Includes basidiospores (mushroom spores), myxomycetes, plant pathogens such as ascospores, rusts and smuts, and a mix of saprophytic genera with no particular spore type predominating. Distribution of spore types seen mirrors that usually seen outdoors.


† Quantities of molds seen growing are listed in the MOLD GROWTH column and are graded 1+ to 4+, with 4+ denoting the highest numbers.

†† Some comments may refer to the following: Most surfaces collect a mix of spores which are normally present in the outdoor environment. At times it is possible to note a skewing of the distribution of spore types, and also to note "marker" genera which may indicate indoor mold growth. Marker genera are those spore types which are present normally in very small numbers, but which multiply indoors when conditions are favorable for growth.

‡ A "Version" greater than 1 indicates amended data.

SPORE TRAP REPORT: NON-VIABLE METHODOLOGY

- Ascospores Basidiospores Chaetomium Cladosporium Curvularia Memnoniella Nigrospora Other brown
- Penicillium/Aspergillus types Smuts, Periconia, Myxomycetes Stachybotrys

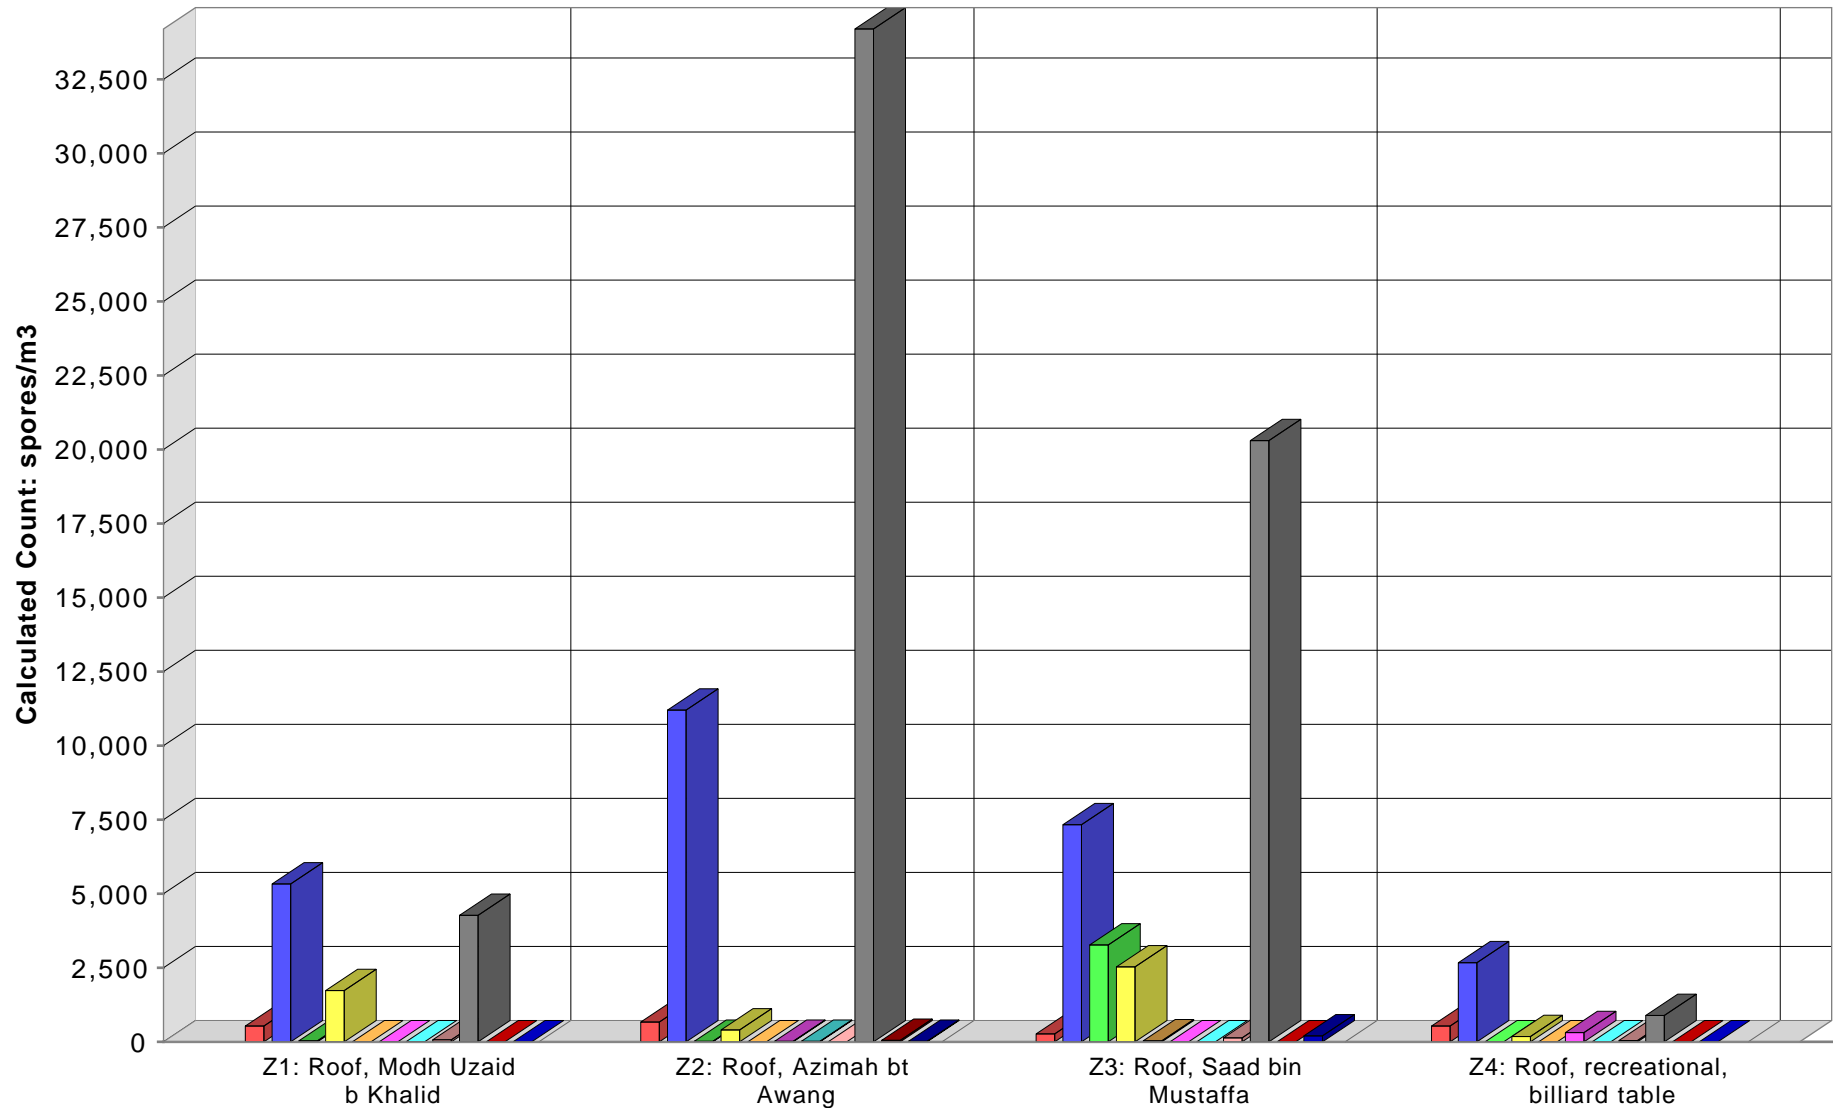


Comments:

Note: Graphical output may understate the importance of certain "marker" genera.

SPORE TRAP REPORT: NON-VIABLE METHODOLOGY

- Ascospores Basidiospores Chaetomium Cladosporium Curvularia Other brown Penicillium/Aspergillus types
- Smuts, Periconia, Myxomycetes Stachybotrys

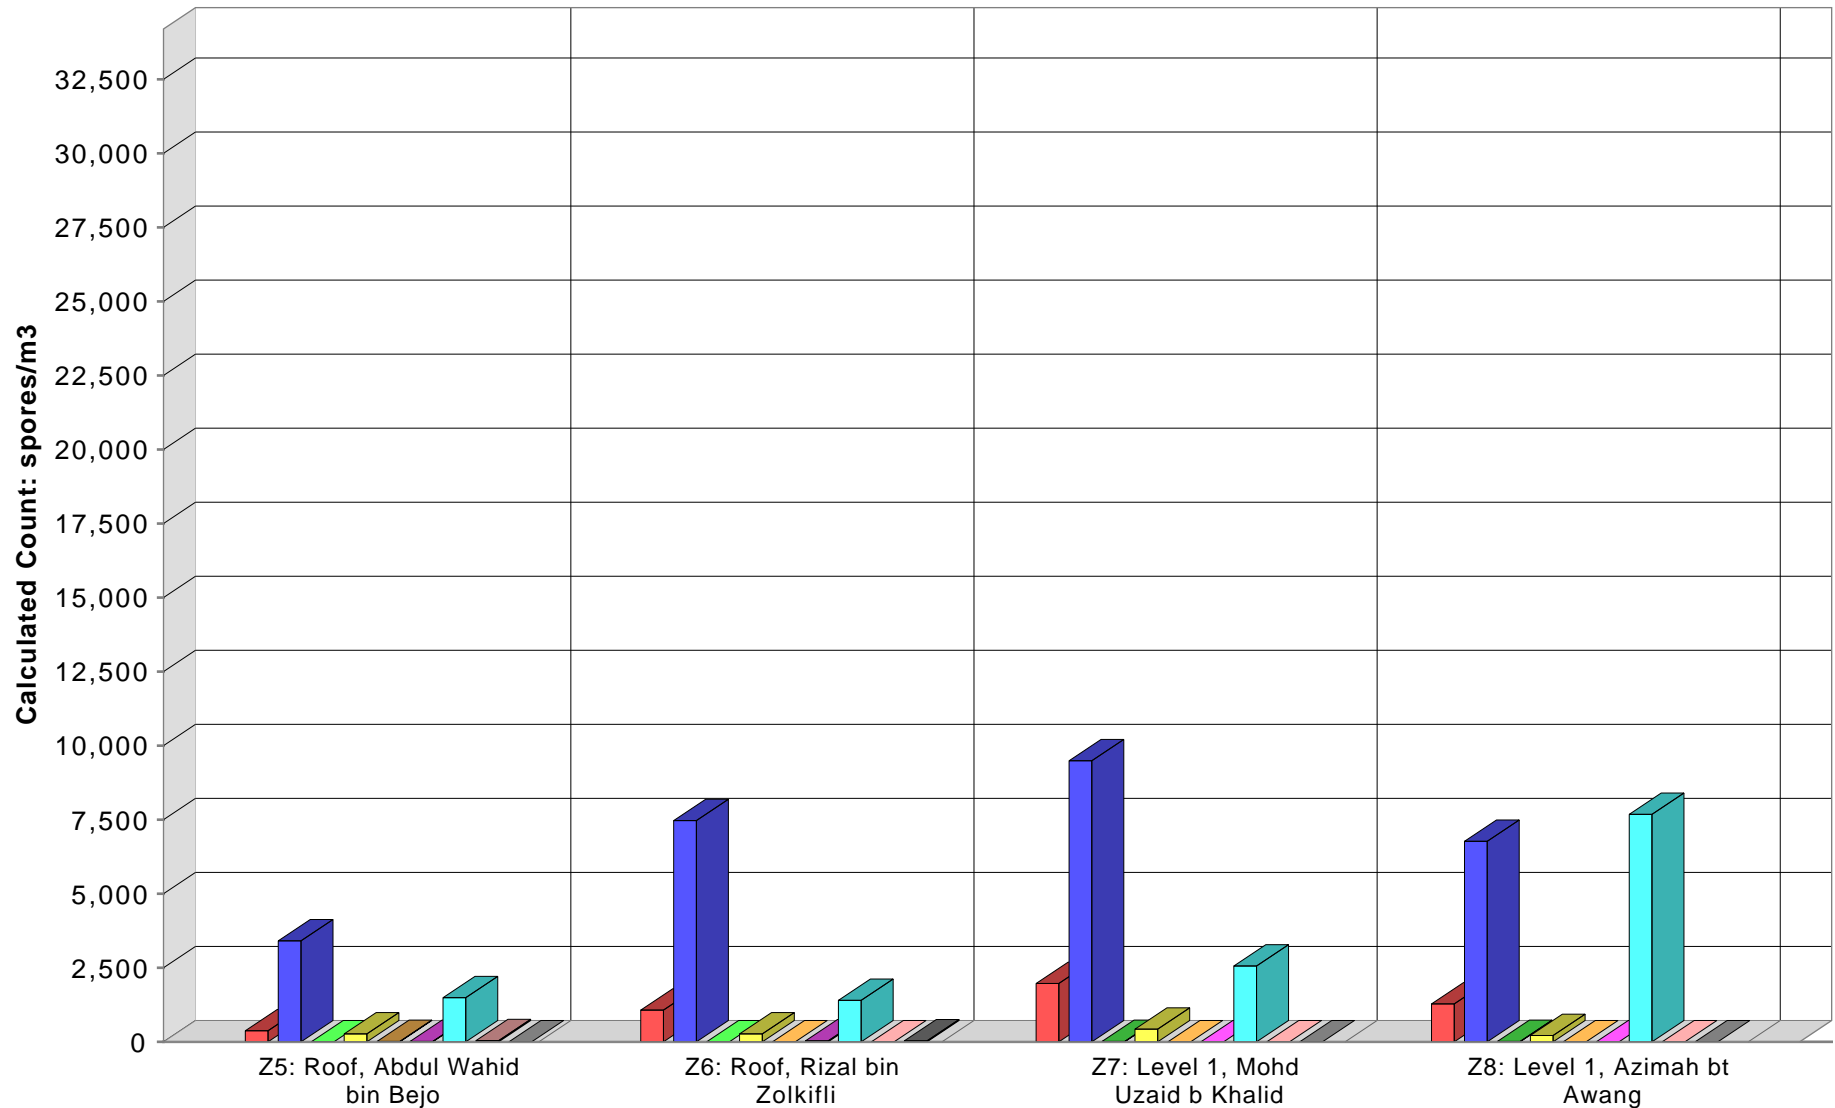


Comments:

Note: Graphical output may understate the importance of certain "marker" genera.

SPORE TRAP REPORT: NON-VIABLE METHODOLOGY


- Ascospores Basidiospores Cladosporium Curvularia Memnoniella Other brown Penicillium/Aspergillus types
- Smuts, Periconia, Myxomycetes

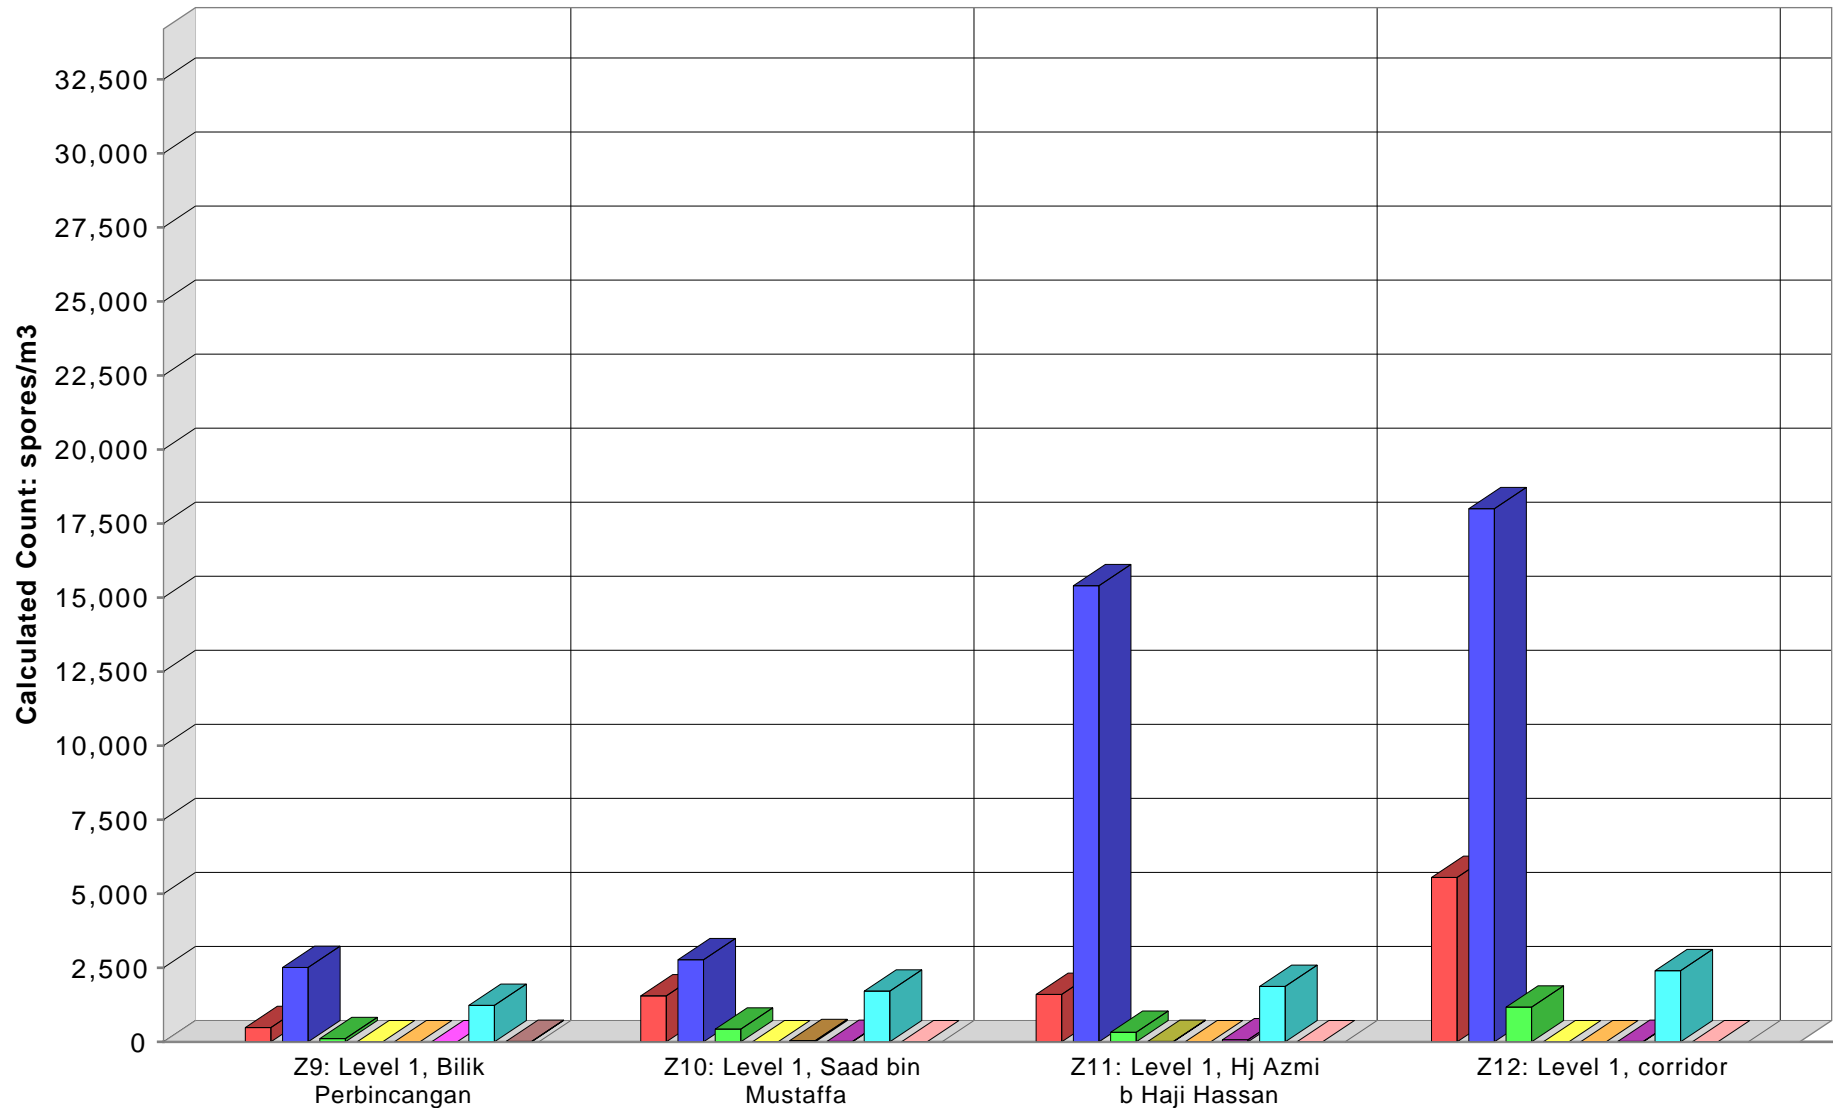

Comments:

Note: Graphical output may understate the importance of certain "marker" genera.


SPORE TRAP REPORT: NON-VIABLE METHODOLOGY

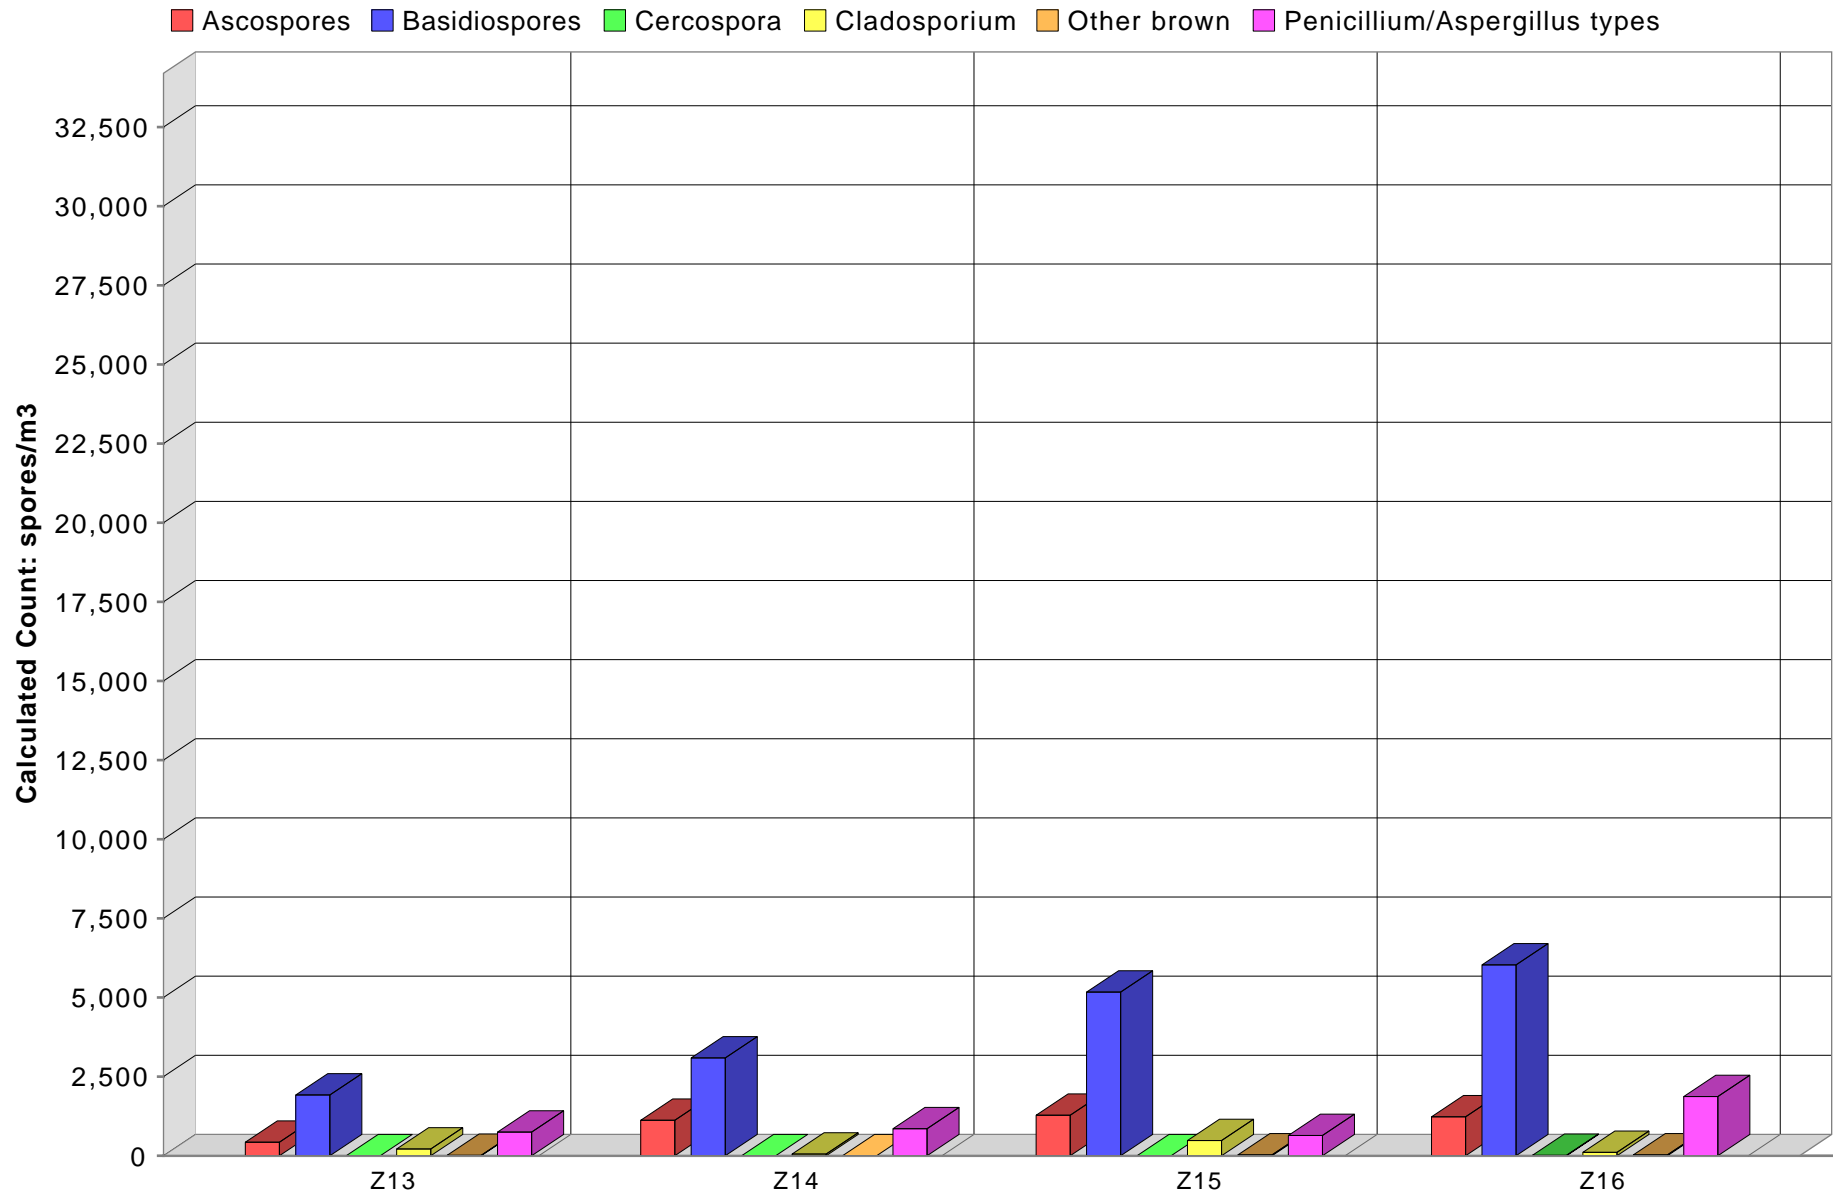

Comments:

Note: Graphical output may understate the importance of certain "marker" genera.


SPORE TRAP REPORT: NON-VIABLE METHODOLOGY

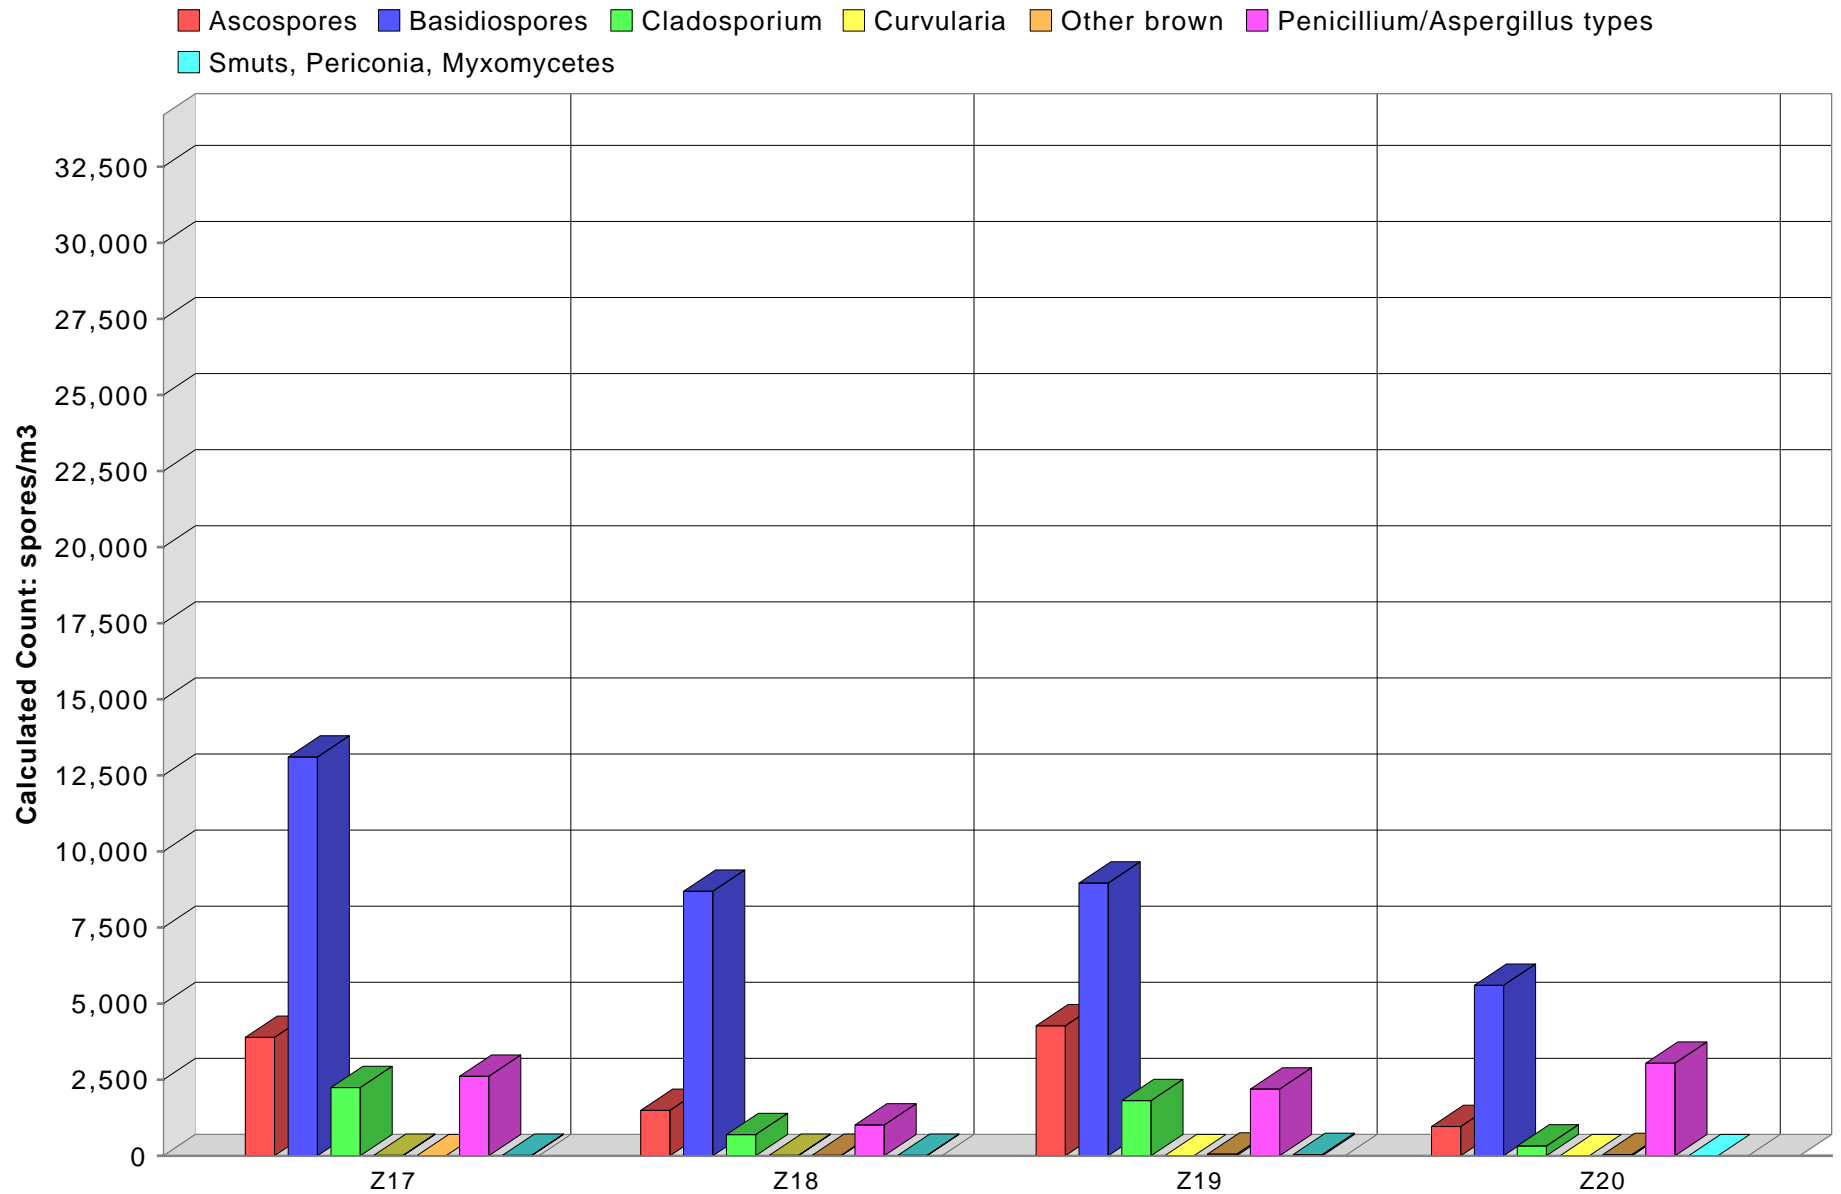

Comments:

Note: Graphical output may understate the importance of certain "marker" genera.


SPORE TRAP REPORT: NON-VIABLE METHODOLOGY

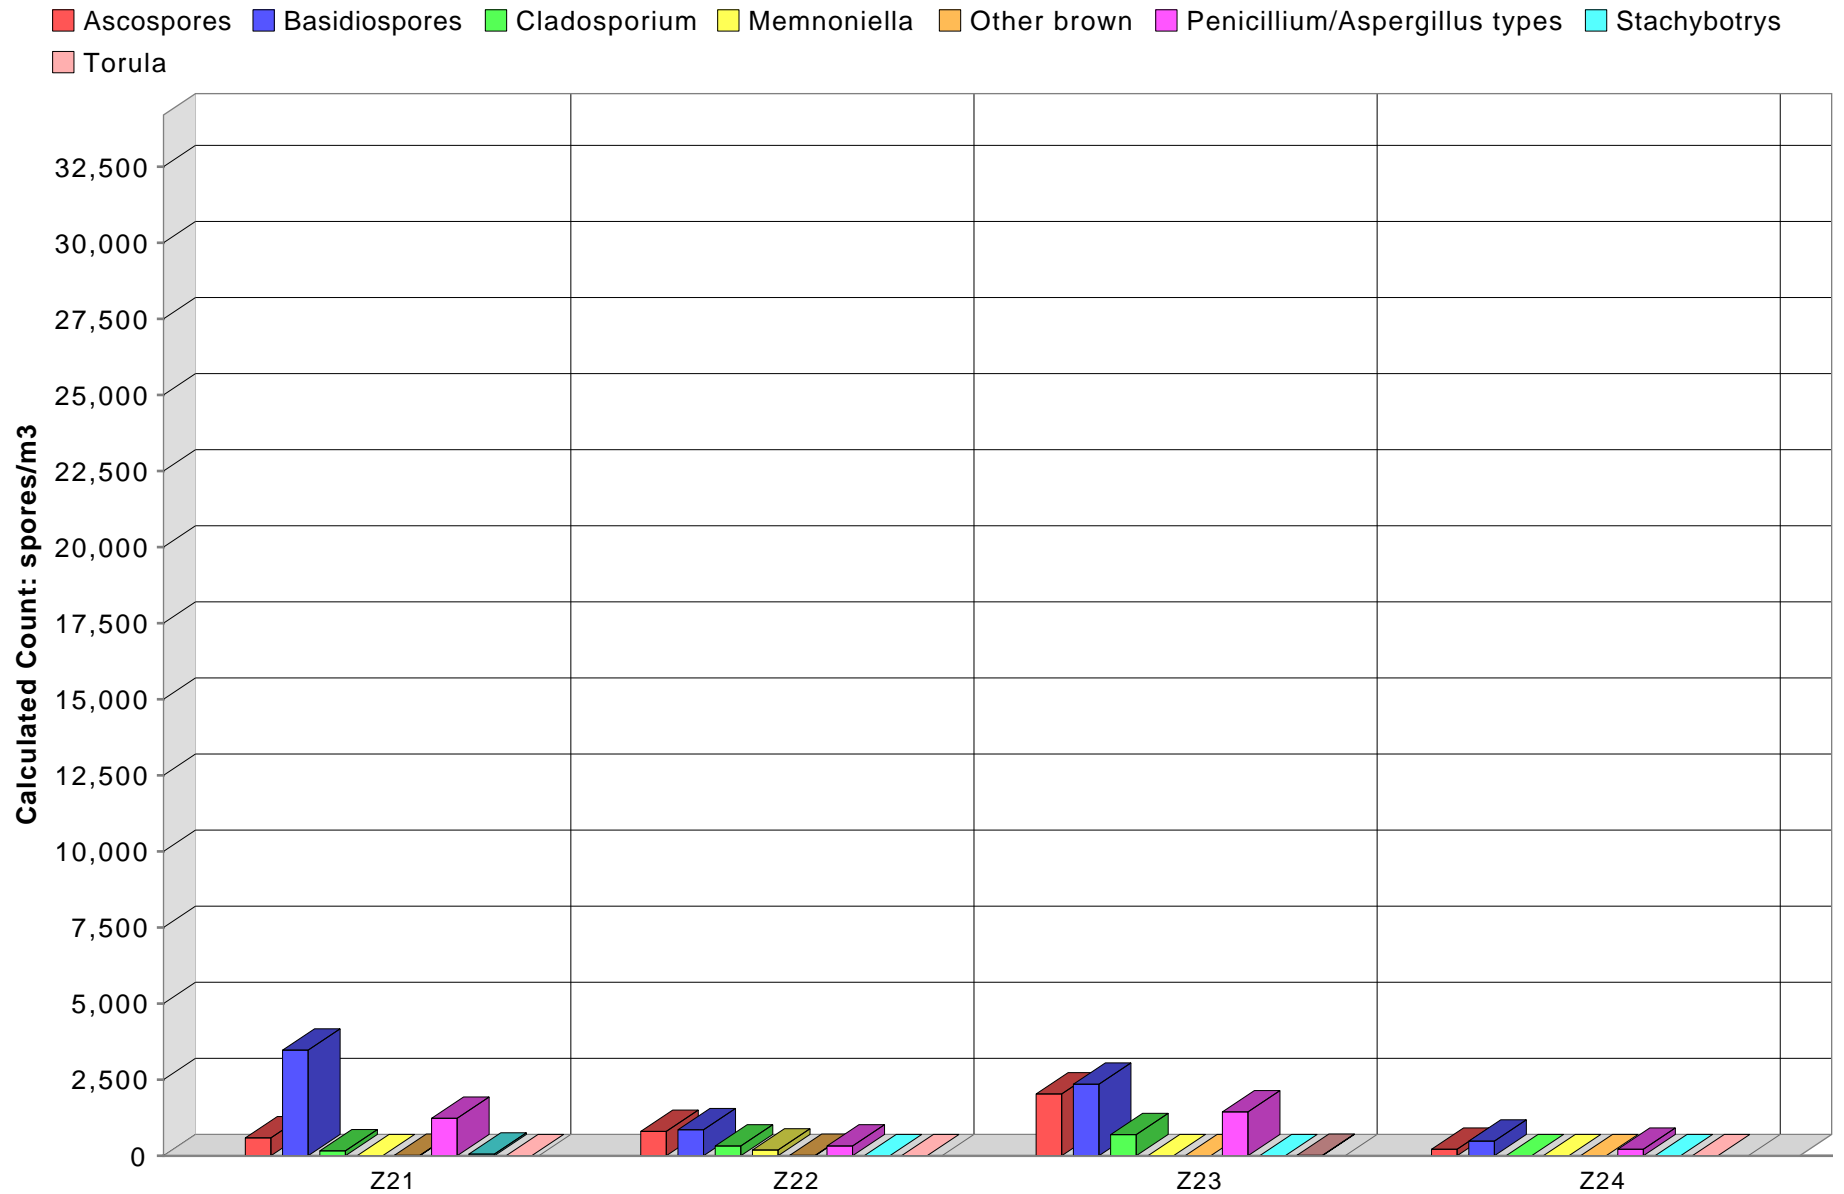

Comments:

Note: Graphical output may understate the importance of certain "marker" genera.

SPORE TRAP REPORT: NON-VIABLE METHODOLOGY

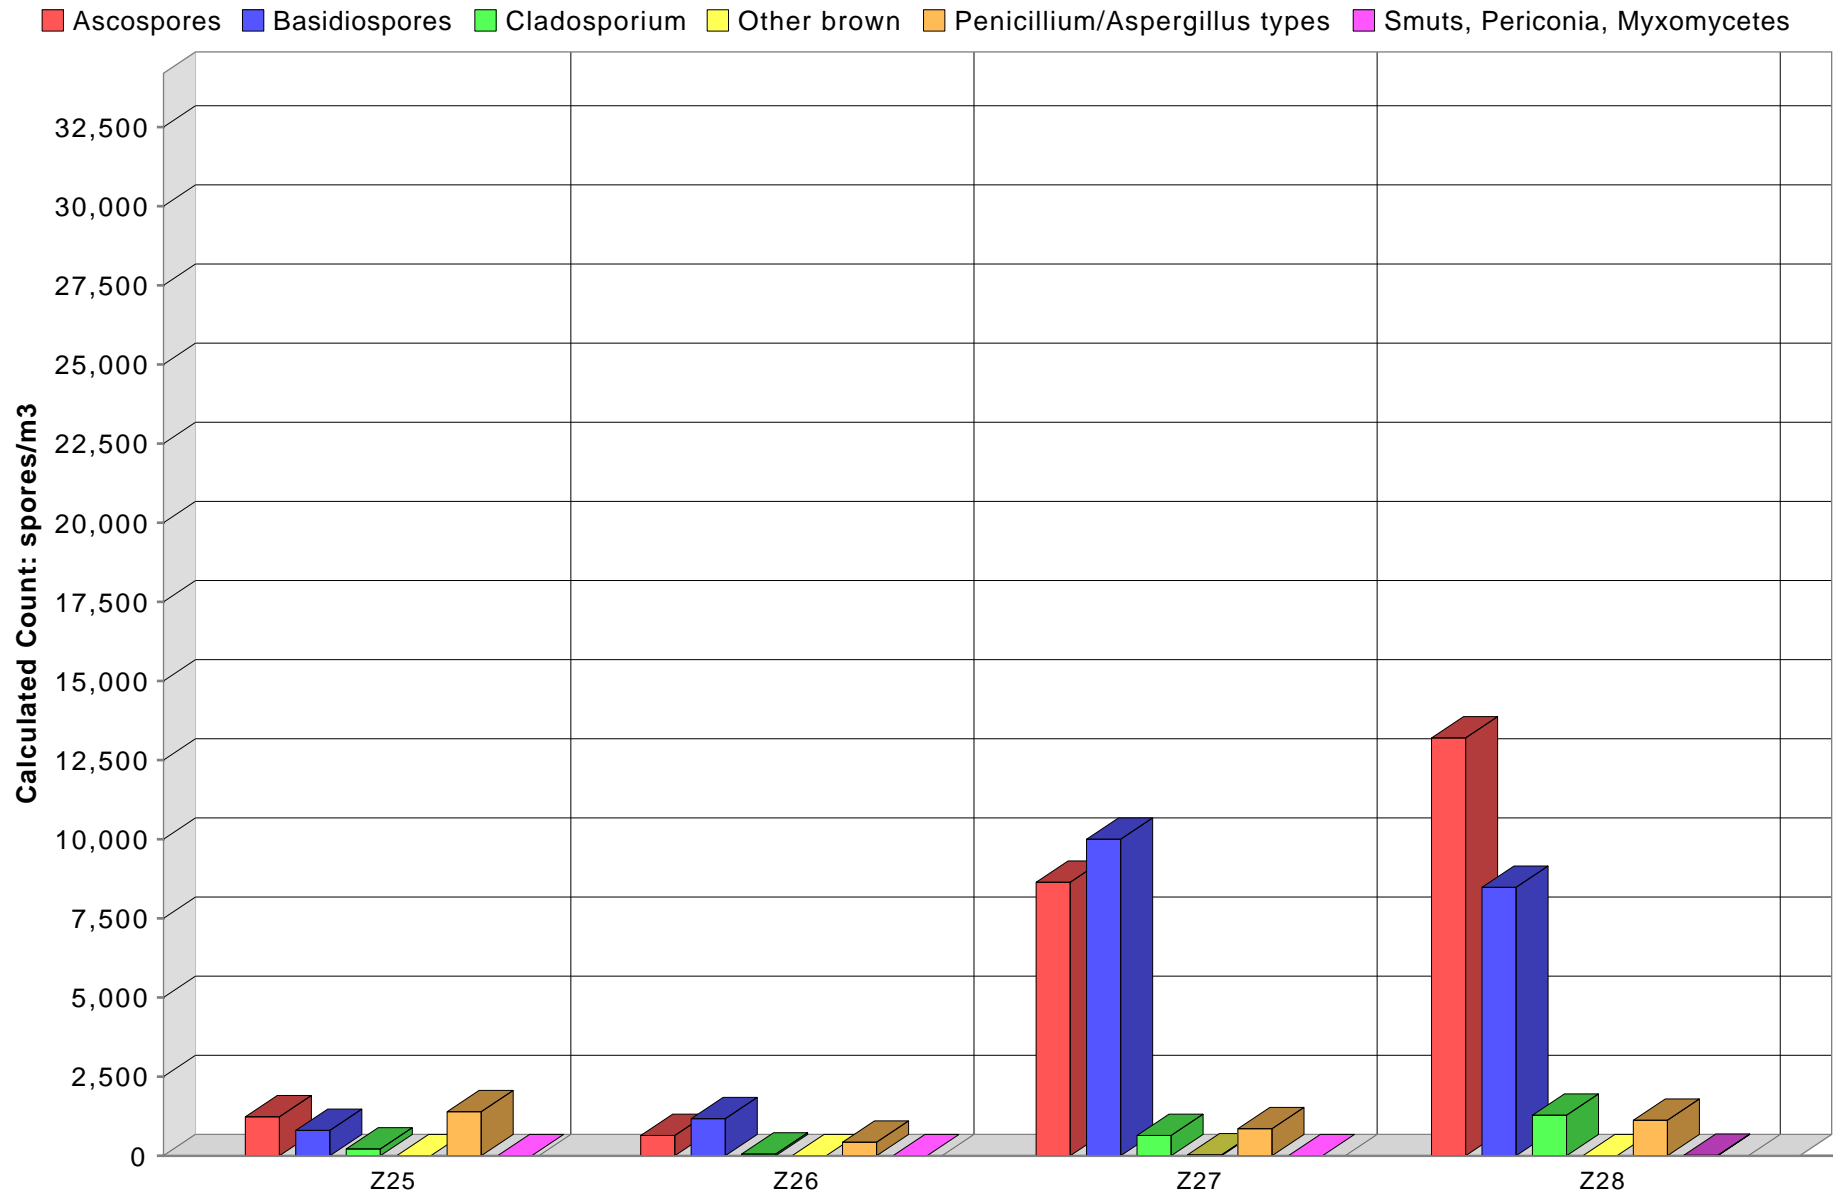

Comments:

Note: Graphical output may understate the importance of certain "marker" genera.

